

# c2 Jack-type Tool

For applying 3/6" and 5/6" width clamps



## **Operating Instructions for the C2 Installation Tool**

#### 1

Pull strapping from carton and cut off. Slide clamp on strap and bend end under at ear side of clamp. Bring opposite end of strap around object twice, each time passing under clamp bridge.

#### 2

Raise ball handle to forward position and insert strapping. Slide tool forward.

### 3

Slide cutter handle forward for alignment. Jack ball handle to reach desired tension.

#### 4


Retract cutter handle and raise to 90-110°. To cut strapping, rotate cutter handle. Increase locking bend by rotating tool forward. Apply thumb pressure on tab as you remove tool. Bend ears with hammer.



## Part Identification for the C2 Installation Tool

Qty Per Part Description Part # Tool 1 Holding dog C207 C207 FA211 FB211 C212 2 Puller links **FXA211** 2 Puller links FXB211 F -1 Puller link pin C212 FY217 FX214 F233 FA220 1 Pulling dog FX214 1 Pulling dog spring **FY217** 1 Pulling dog pin F233 1 1 Ball handle assembly FA220 CA231 F242 **EXP201** F232 Pusher puller assembly 1 CA231 3 Retaining rings F242 Cutter **EXP201** 1 1 Crescent ring F232 C200 F233 1 Cutter handle C200 1 Holding dog pin F233 2 3/16" x 5/8" roll pin C236 C236

Illustrations are not in correct proportion to one another.

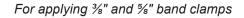

## **Sliding Jack Replacement Kit**

#### Feature:

fits the F100, F175 and C2 tools





#### Dixon

800 High Street Chestertown, MD 21620 877.963.4966 Fax: 800.283.4966 **dixonvalve.com**